


PC SERIAL CONTROL (RS-232) SETUP INSTRUCTIONS FOR THE SE-500

TOOLS REQUIRED

- Windows PC with a serial port or Windows PC with a USB to serial port adapter
- one 9-pin serial cable (Male to Female)

Step 1: Please verify the COM PORT number on your PC with these steps.

- Right click on My Computer and select Properties.
- Click on the Hardware tab and select Device Manager.

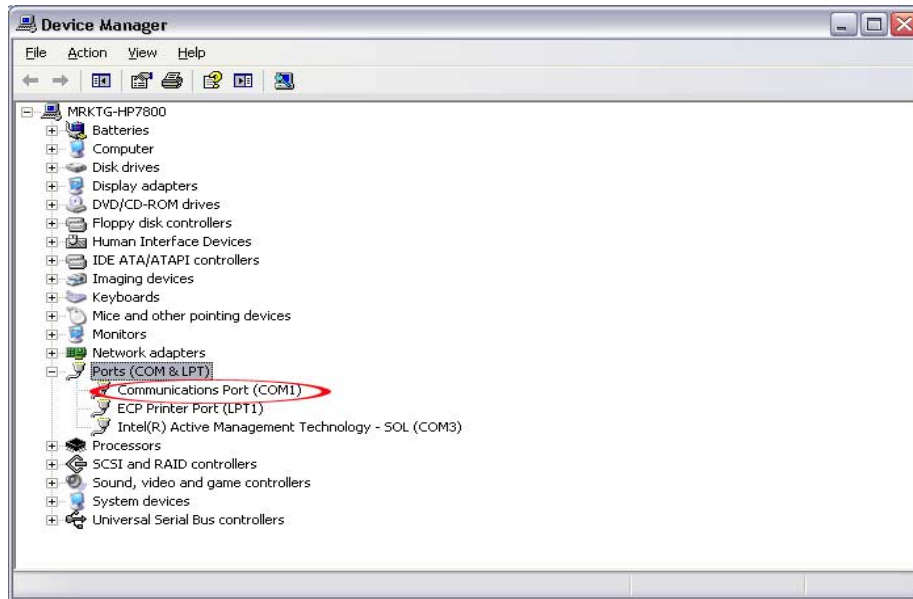

Step 2: Download the zip file, "RMC-150_SETUP" to your PC. The file can be found on the RMC-150 page on the www.datavideo.us website under the "Software" tab.


Step 3: Power on your SE-500 and wait for the initialization to complete.

Step 4: Connect your PC to the SE-500 using the serial cable via the RS-232 port.

Step 5: Open the "RMC-150_SETUP" zip file and go into the folder, "RMC-150_UI". Then, Double click the file, "SE500.EXE" to launch the program. A graphical user interface of the SE-500 switcher will appear on the screen of your PC. See the image below:



Step 6: Right click on any portion of the blue interface and a drop down menu will appear. Select "options" from the drop down menu.

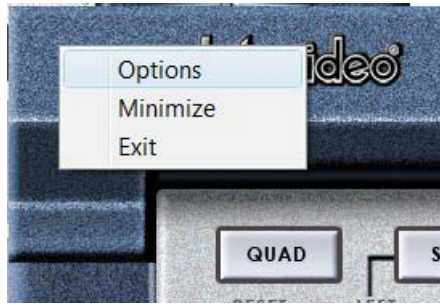

Step 7: Select "Serial Port" under "Control Interface". Make sure you select the right COM PORT number from your PC. Press "Okay" to complete the set up.

