



Instant reset for individual video input channel

- 1.) Select A, B, C, or D in the **Input Format** section.

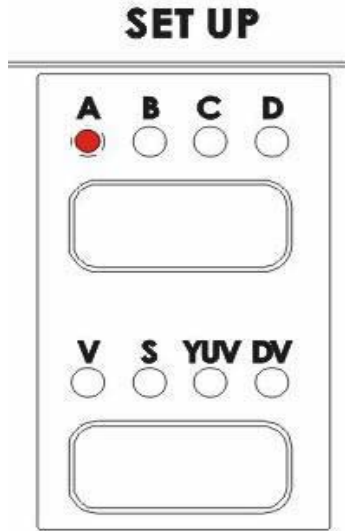

- 2.) Hold down the Sub-Source button of A, B, C, or D for about three seconds until it finishes blinking, it will reset that selected channel accordingly.

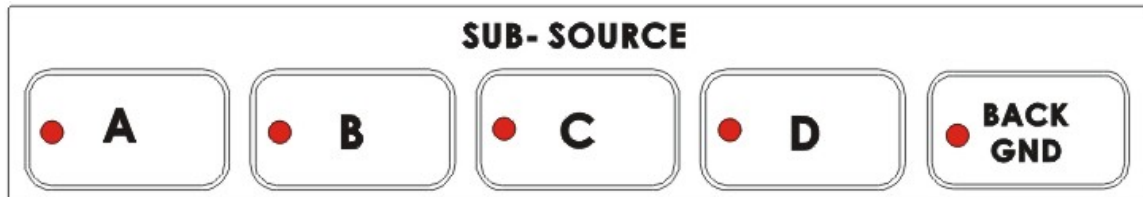

You may also Reboot the SE-800 by its power switch to refresh input signals. Note: All settings will be saved until changed or a hard reset has been performed. Channel selections will default to A Mainsource and B Sub-Source upon bootup.